


The UK Composite Decking balcony screw is designed to allow the installer to secure composite decking to a 1.5mm – 5.0mm thick steel substrate. Balcony screws are available in brown, grey & black and are 38mm in length.

Also available are 3.3mm HSS drill bits to suit the screws and an adjustable drill/countersink



Ecodek balcony screws are available in boxes of 200 all are supplied with free driver bit.

£7.00 + VAT per box

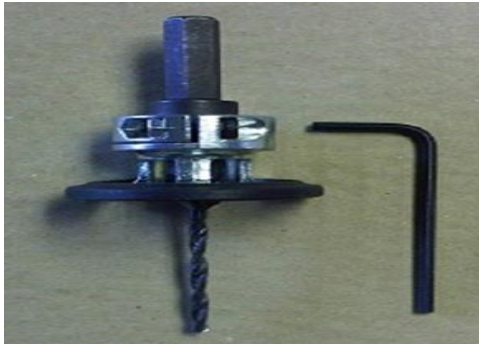

Adjustable drill/countersink combi tool with free spinning auto-stop collar

£10.00 + VAT each



3.30mm HSS drill bits - box of 10

£3.50 + VAT per box of 10

- Step 1:** Remove the drill bit that comes with the combi tool and fit one of the 3.30mm HSS bits
- Step 2:** Adjust the combi tool countersink depth (if necessary) so that 4-5mm is exposed past the free spinning auto-stop collar.
- Step 3:** Drill the Ecodek board and steel sub structure in one operation (see Quick Installation Guide for details on screw hole location).
- Step 4:** Screw down the Ecodek using the supplied driver bit. Take care not to damage the rust proof coating on the screw heads as you drive them in.

**Fixing method for attaching to steel support frame**

